



# Instruction manual for the **Premium Classic** **newECO** **Protect Classic**

As of 06/2014

# Contents

1	Introduction.....	3
2	Safety rules.....	3
3	Intended use .....	3
4	Operating the movable wall.....	4
	4.1 General information.....	4
	4.2 Before operating.....	4
	4.3 movable wall with two point suspension .....	5
	4.3.1 Opening movable wall.....	5
	4.3.2 Closing movable wall.....	5
	4.4 movable wall with single point suspension.....	6
	4.4.1 Opening movable wall .....	6
	4.4.2 Closing movable wall .....	6
5	General cleaning instructions.....	7
6	Guarantee .....	8
7	Disposal .....	8
8	Adress of manufacturer.....	8

# 1 Introduction

Dear customer,

Thank you for buying our movable wall system.

You have acquired a state-of-the-art quality product, which was produced according to the recognised rules of technology.

Please read this instruction manual carefully, follow the safety instructions and keep this manual for future reference.

## 2 Safety rules

The operator may only carry out any work or settings, which are described in this manual.

Children must not operate this movable wall system.

To guarantee a smooth operation of your mobile movable wall, please follow all the instructions, described in this manual.

## 3 Intended use

- The Premium Classic / newECO / Protect Classic is a movable wall system.

It allows you to functionally and flexibly divide rooms up into more rooms.

Other use of any form is not permitted and can be dangerous for both the operator and others.

Any damage caused by other uses will not be covered by the manufacturer. The manufacturer cannot be held liable in this case.

- The initial start-up must be carried out by an installation company, which is certified by the company Nüsing.
- The movable wall is intended only for dry interior rooms.

# 4 Operating the Premium Classic newECO Protect Classic

## 4.1 General information.

The wall(s) should only be operated by fully trained personnel.

Always push the panels at walking pace using one hand to guide them.

To achieve maximum sound insulation, the wall(s) must always be built up perfectly plumb. Make sure that all the seals are fully extended.

On wicket door panels, the operation of the bottom seal on the door leaf is controlled by the mechanism in the door stile at the bottom on the hinge side. Important: Before moving the door panel, slide the cover plate fully upwards. For single wing wicket door panel "SE40": deactivate the turn-wheel!

Our movable wall installations are basically maintenance free. To ensure a long and trouble-free life for your installation, we recommend a yearly check by our service team.

## 4.2 Before operating

Please make sure that all wicket doors are closed, before starting to build up or dismantle the wall(s).

## 4.3 Movable wall with two point suspension



### 4.3.1 Opening movable wall

Insert the crank handle provided into the socket in the telescopic panel (No. 1) and turn it in the arrowed direction until it stops. This retracts the vertical and horizontal seals.



You can now pull panel 1 out from its joint with panel 2. Use the crank handle to help with this movement. Move panel 1 until the top roller reaches the branch track whilst pushing the top roller into the branch track



Move the telescopic panel (No. 1) into its final parking position. To unlock the next panel (No. 2), insert the crank handle into the socket in the rear profile of the panel and turn it anti-clockwise until it stops. The horizontal seals retract and you can pull the panel out from its joint with panel 3.



Move the panel (No. 2) until the top roller reaches the branch track whilst pushing the top roller into the branch track. You can then move the panel into its final parking position.

### 4.3.2 Closing movable wall

The procedure for closing the movable wall is exactly the opposite to opening it, starting with panel 4.

## 4.4 Movable wall with single point suspension



### 4.4.1 Opening movable wall

Insert the crank handle provided into the socket in the telescopic panel (No. 1) and turn it in the arrowed direction until it stops. This retracts the vertical and horizontal seals.



You can now pull panel 1 out from its joint with panel 2. Use the crank handle to help with this movement. Now turn the panel through 90 degrees.



Push the panel (No. 1) at right angles to the track into its final parking position. To unlock the next panel (No. 2), insert the crank handle into the socket in the rear profile of the panel and turn it anti-clockwise until it stops. The horizontal seals retract and you can pull the panel out from its joint with panel 3.



Turn the panel through 90 degrees. You can then move it into its final parking position.

### 4.4.2 Closing movable wall

The procedure for closing the movable wall is exactly the opposite to opening it, starting with panel 4.

## 5 General cleaning instructions

### Plastic finishes:

#### *Light, new stains:*

- Use paper towels; soft, clean cloth (dry or damp); sponge etc.
- When wet cleaning, wipe dry immediately with absorbent paper towels.

#### *Normal stains:*

- Clear, warm water; clean, soft duster or cloth; soft sponge or soft brush (e.g. nylon brush)
- Usual non-abrasive cleaners; soft soap or toilet soap.
- Apply cleaner on a sponge and apply to the stain, allow to soak according to the severity of the stain. Wash off with clear water or glass cleaner. Repeat if necessary.
- Remove all remaining cleaning material to avoid streaks.
- Wipe the surface dry with absorbent paper towels. Change towels frequently.

### Wood finishes:

#### *Light and normal stains:*

- Paper towels; soft, clean towels (dry)
- When wet cleaning, wipe dry immediately with absorbent paper towels.

### Textile finishes:

#### *Light and normal stains:*

- Use a soft brush or a vacuum cleaner.

### Sheet steel finishes:

#### *Light, new stains:*

- Use paper towels; soft, clean cloth (dry or damp); sponge etc.
- When wet cleaning, wipe dry immediately with absorbent paper towels.

#### *Normal stains:*

- Clear, warm water; clean, soft duster or cloth; soft sponge or soft brush (e.g. nylon brush)
- Usual non-abrasive cleaners; soft soap or toilet soap.
- Work cleaning material into a foam and apply to the stain, allow to soak according to the severity of the stain. Wash off with clear water or glass cleaner. Repeat if necessary.
- Remove all remaining cleaning material to avoid streaks.
- Wipe the surface dry with absorbent paper towels. Change towels frequently.

## Warning!

Do not use any abrasive materials (scouring powder, wire wool), polishes, waxes, furniture polish, or bleach for regular cleaning.

Do not use any strong acid or alkaline cleaning materials such as lime scale remover, formic acid, amino sulphates, drain cleaner, hydrochloric acid, silver polish, oven cleaner.

## 6 Guarantee

The Premium Classic / newECO / Protect Classic is produced according to the recognised rules of technology and is subject to continuous quality controls.

The whole product is guaranteed for up to 5 years.

Nevertheless, should any error occur, please contact our service team immediately.

Damage caused by natural wear and tear, inappropriate use, or unauthorised modification is excluded from this guarantee.

## 7 Disposal

Please dispose of the movable wall according to current regulations. Information is available from your local council.

## 8 Address of manufacturer



Franz Nüsing GmbH & Co. KG

Borkstraße 5  
48163 Münster  
(Germany)

Phone: +49 (0)251 780010  
Fax: +49 (0)251 780018927

[www.nuesing.com](http://www.nuesing.com)  
[info@nuesing.com](mailto:info@nuesing.com)